



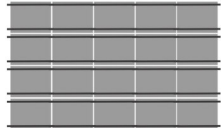



Stückliste für Flachdach

| Art-Nr. | Format | Reihe | xModulmenge | Anzahl | | | | | | Bildbeispiel |
|----------|----------|-------|-------------|-------------------|-------------------------------------|---------------------------------------|--|------------------------|--------------------------|---|
| | | | | =insg. Modulmenge | Alu Profilschienen 1,8m 4581 (2165) | Verbinder für Grundschiene 523 (2175) | Stockschraube (inkl. Hammerkopf/ Adapterwinkel) 118 (2043/2331/2326) | Modulhalter 519 (2172) | Modulendhalter 522(2173) | |
| 4085-001 | Querkant | 4 | 1 | 4 | 8 | 0 | 16 | 0 | 16 |  |
| 4085-004 | Querkant | 4 | 2 | 8 | 16 | 8 | 32 | 8 | 16 |  |
| 4085-007 | Querkant | 4 | 3 | 12 | 24 | 16 | 56 | 16 | 16 |  |
| 4085-010 | Querkant | 4 | 4 | 16 | 32 | 24 | 72 | 24 | 16 |  |
| 4085-013 | Querkant | 4 | 5 | 20 | 40 | 32 | 88 | 32 | 16 |  |
| 4085-016 | Querkant | 4 | 6 | 24 | 48 | 40 | 112 | 40 | 16 |  |

Stockschrauben-Rechenformel: Modulanzahl x Schienenlänge = Zwischensumme ./ . Sparrenbreite (Standard 0,80m) = abgerundete Zahl x 2 = Anzahl Schrauben x 4 Reiher